




PENETRATING WOOD SEALER

WoodArmour® wood sealer is an easy to use, solvent-borne, water repellent which penetrates wood. Suitable for low to high density wooden surfaces, it enhances the grain and natural appearance of the wood while protecting it from rain, sun and insects.

Bring wooden surfaces to life with a high quality finish which sinks a little deeper with each treatment. Restore faded, cracked, dried out or streaked wood with WoodArmour®.

Usage instructions

- Ensure surface is dry, clean and well sanded.
- Stir mixture well to ensure an even colour.
- For untreated wood, apply three coats of WoodArmour® successively.
- Allow 18 – 24 hours between coats for drying and penetration.
- WoodArmour® sinks deeper with each application, so wood takes slightly longer to dry out after each application.
- If surface to be treated is uneven, use an applicator pad or steel wool prior to coating.
- For optimal results, coat all surfaces including the end grain.
- Ensure the working area is well ventilated.
- Brushes should be cleaned with mineral turpentine.
- Recoat the wood as soon as it starts looking faded or dry.
- HIGHLY FLAMMABLE. DO NOT EXPOSE TO NAKED FLAMES.

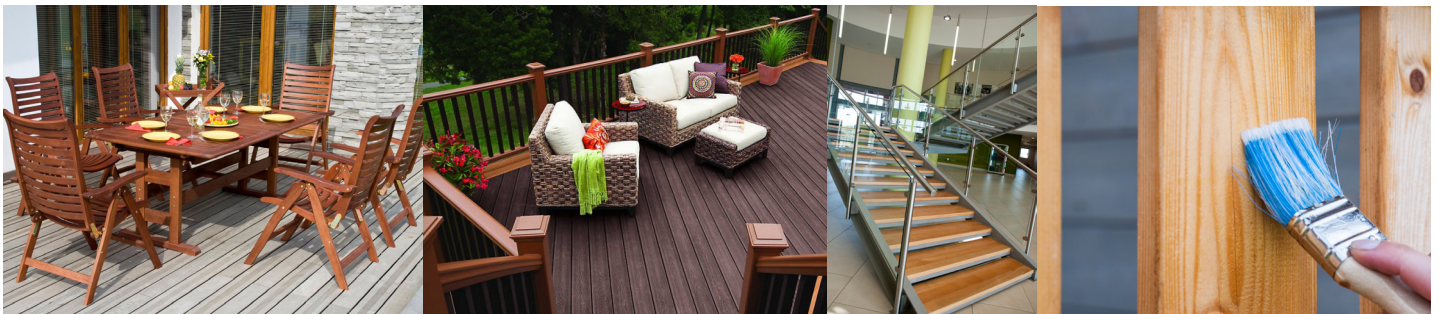



GLOSS FINISH - VARNISH

WoodArmour® wood VARNISH is an easy to use, solvent-borne, water repellent varnish which penetrates wood. Suitable for low to high density wooden surfaces, it provides a high quality, decorative and durable gloss finish which enhances the grain and natural appearance of the wood while protecting it from the effects of nature.

USAGE INSTRUCTION

New surfaces

- Wood should be dry, clean and well sanded.
- Stir mixture well to ensure even colour throughout.
- For untreated wood, apply three coats of WoodArmour® successively.
- Drying time: touch dry within four hours. Allow 15 – 18 hours to 'hard dry' between coats.
- Apply with paint brush or spray.
- An initial coating followed by at least two successive coats is recommended for optimal results.

Previously coated wood

- Prepare wood by sanding and removing all dust (it might be necessary to use paint stripper).
- Apply two to three coats of WoodArmour® Varnish.
- If surface to be treated is uneven, use an applicator pad or steel wool prior to coating.
- For optimal results, coat all surfaces including the end grain.
- Ensure the working area is well ventilated.
- Brushes should be cleaned with mineral turpentine.
- Recoat the wood as soon as it starts looking faded or dry. Apply one coat of WoodArmour® Penetrating Sealer before one or two coats of varnish.

HIGHLY FLAMMABLE. DO NOT EXPOSE TO NAKED FLAMES.

